



Interval Turf Rolls & Turf Interlocking Tiles

Technical Manual

Installation · Maintenance · Warranty

Manufactured in the U.S.A. by Ecore

Revised on 16Feb2023
Supersedes all previous versions.
Check website for updates.

| | |
|--|---|
| Roll Installation | |
| Job Site Conditions | 2 |
| Subfloors | 2 |
| Subfloor Prep | 2 |
| Material Storage & Handling | 3 |
| Roll Installation | 4 |
| Interlocking Tile Installation | 5 |
| Job Site Conditions | 5 |
| Storage & Handling | 6 |
| Area Mat Layout | 6 |
| Wall to Wall Layout | 6 |
| Rolls and Interlocking Tile Maintenance | 7 |
| Warranty | |
| Warranty | 9 |

ROLLS

I. JOB SITE CONDITIONS

1. Installation should not begin until after all other trades are finished in the area. If the job requires other trades to work in the area after the installation of the floor, the floor should be protected.
2. Areas to receive flooring should be weather tight and maintained at a minimum uniform temperature of 65°F (18°C) for 48 hours before, during, and after the installation.

II. SUBFLOORS

Centaur Interval Turf rolls may be installed over concrete, Portland-based patching and leveling materials, and wood.

NOTE: Gypsum-based patching and leveling compounds are not acceptable.

NOTE: The selected Portland-based patching and self-leveling materials must be moisture resistant and rated to withstand the RH moisture levels on the project.

1. Wood Subfloors – Wood subfloors should be double construction with a minimum thickness of one inch. The floor must be rigid and free from movement with well-ventilated air space below.
2. Underlayments – The preferred underlayment panel is American Plywood Association (APA) underlayment grade plywood, minimum thickness of 1/4-inch, with a fully sanded face.

NOTE: The selected Portland-based patching and self-leveling materials must be moisture resistant and rated to withstand the RH moisture levels on the project.

NOTE: Particleboard, chipboard, Masonite and lauan are not considered to be suitable underlayments.

3. Concrete Floors – Concrete shall have a minimum compressive strength of 3000 psi. New concrete slabs should cure for a minimum of 28 days before installation. It must be fully cured and permanently dried.
4. Radiant Heat
 - a. Interval Turf Rolls & Interlocking Tiles are not suitable for installation over radiant heat.

II. SUBFLOOR REQUIREMENTS AND PREPARATION

1. Subfloors should be dry, clean, smooth, level, and structurally sound. They should be free of dust, solvent, paint, wax, oil, grease, asphalt, sealers, curing and hardening compounds, alkaline salts, old adhesive residue, and other extraneous materials, according to ASTM F710.
2. Subfloors should be smooth to prevent irregularities, roughness, or other defects from telegraphing through new flooring. The surface should be flat to the equivalent of 3/16" (4.8 mm) in 10' (3.0 m).
3. Mechanically remove all traces of old adhesives, paint, or other debris by scraping, sanding, or scarifying the substrate. Do not use solvents. All high spots shall be ground level and low spots filled with a Portland-based patching compound.
4. All saw cuts (control joints), cracks, indentations, and other non-moving joints in the concrete must be filled with a Portland-based patching compound.
5. Expansion joints in the concrete are designed to allow for expansion and contraction of the concrete. If a floor covering is installed over an expansion joint, it will likely fail in that area. Use expansion joint covers designed for resilient flooring.
6. Always allow patching materials to dry thoroughly and install according to the manufacturer's instructions. Excessive moisture in patching material may cause bonding problems or a bubbling reaction with the E-Grip III adhesive.

HAZARDS:

SILICA WARNING – Concrete, floor patching compounds, toppings, and leveling compounds can contain free crystalline silica. Cutting, sawing, grinding, or drilling can produce respirable crystalline silica (particles 1-10 micrometers). Classified by OSHA as an IA carcinogen, respirable silica is known to cause silicosis and other respiratory diseases. Avoid actions that may cause dust to become airborne. Use local or general ventilation or provide protective equipment to reduce exposure so it's below the applicable exposure limits.

ASBESTOS WARNING – Resilient flooring, backing, lining felt, paint, or asphaltic “cutback” adhesives can contain asbestos fibers. Avoid actions that cause dust to become airborne. Do not sand, dry sweep, dry scrape, drill, saw, beadblast, or mechanically chip or pulverize. Regulations may require that the material be tested to determine the asbestos content. Consult the document “Recommended Work Practices for Removal of Existing Resilient Floor Coverings” available from the Resilient Floor Covering Institute.


LEAD WARNING – Certain paints can contain lead. Exposure to excessive amounts of lead dust presents a health hazard. Refer to applicable federal, state, and local laws and the publication “Lead Based Paint: Guidelines for Hazard Identification and Abatement in Public and Indian Housing” available from the United States Department of Housing and Urban Development.

7. Moisture must be measured using the RH Relative Humidity test method per the ASTM F2170 test standard. Moisture content should not exceed the allowable limit of the selected Ecore adhesive.
 - A. E-Grip III – RH limit of 85% – normally selected
 - B. E-Grip 95 – RH limit of 95% – higher RH applications
 - C. E-Grip 99 – RH limit of 99% – highest RH applications
 - If RH levels exceed the selected Ecore adhesive’s RH limit, stop and correct situation.
8. In the event that a moisture mitigation system is required, it must conform to the ASTM F3010 Standard Practice for Two-Component Resin Based Membrane Forming Moisture Mitigation Systems for use Under Resilient Floor Coverings.
9. Perform pH tests on all concrete floors. If greater than the allowable limit of the adhesive, neutralize prior to installation.
10. Adhesive bond tests should be conducted in several locations throughout the area. Glue down 3’ x 3’ test pieces of the flooring with the recommended adhesive and trowel. Allow to set for 72 hours before attempting to remove. A sufficient amount of force should be required to remove the flooring and, when removed, there should be adhesive residue on the subfloor and on the back of the test pieces.

III. ROLL MATERIAL STORAGE AND HANDLING

1. Material should be delivered to the job site in its original, unopened packaging with all labels intact.
2. Note: Shipping pallets, cradles, banding, etc. are not intended for storage. After 7 days, remove material from shipping pallets, cradles, etc. Turf roll material should always be stored laying down; storing on end will curl the edges, possibly permanently, which would then require straight edge cutting to remove the curl before installation.
3. Material should only be stored inside on a clean, dry, smooth surface. Rolls should be stored with the end of the roll on top, facing up. The end of the roll should not be positioned against an adjacent roll or surface, or welts may be created on that roll and the roll below. Roll material is stretched slightly during the manufacturing process. At the job site, the installer should unroll all rolls and allow to relax overnight. In some instances, it may be necessary to weigh down the seam until adhesive develops a firm set.
4. **Inspect all materials for visual defects before beginning the installation. No labor claim will be honored on material installed with visual defects. Verify the material delivered is the correct style, color, and amount. Any discrepancies must be reported immediately before beginning installation.**

5. The material and adhesive must be acclimated at room temperature for a minimum of 48 hours before starting installation.
6. **All Interval Turf rolls must be unrolled and installed in the same direction. Laying rolls in the opposite direction can cause color variations between the rolls. See diagram next page.**

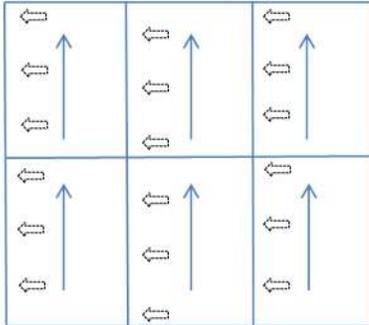

7. Roll material is stretched slightly during the manufacturing process. At the job site, the installer should unroll all cuts and allow to relax overnight. A bare minimum of two hours is required. Shaking the material once it is unrolled can help it to relax.

IV. ROLL INSTALLATION

1. Assume that the walls you are butting against are not straight or square. Using a chalk line, make a starting point for an edge of the flooring to follow. The chalk line should be set where the first seam will be located.
2. Remove the Interval Turf from the shrink wrap and unroll it onto the floor. Lay roll on floor in a way that will use your cuts efficiently. Cut all rolls at the required length, including enough to run up the wall a few inches.
3. If end seams are necessary, they should be staggered on the floor and overlapped approximately 3". End seams will be trimmed after acclimation period using a square to ensure they fit tightly without gaps.
4. After rough cutting, allow the cuts to relax in position for a minimum of two hours, but 24 hours is preferred.
5. After allowing the flooring to acclimate and relax you may begin the installation.
6. Align the first edge to the chalk line.
Note: it is very important that the first seam is perfectly straight.
7. Position the second roll with no more than a 1/8" overlap over the first roll at the seam. After adhesive is applied to substrate the material will be worked back to eliminate the overlap. This procedure will leave tight seams and eliminate any gaps. Care should be taken to not over compress the seam. Over compressed seams will cause peaking.

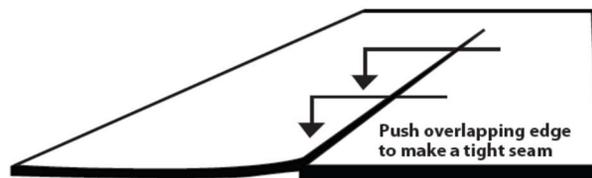


Diagram 2

8. Repeat for each consecutive sheet necessary to complete the area or those rolls that will be installed that day.

V. ROLL INSTALLATION - GLUE DOWN

1. After performing the above procedures, begin the application of the adhesive. We recommend E-Grip III, a one-component moisture-cured polyurethane adhesive. E-Grip III should not be mixed. It is specially formulated for use right out of the pail. Apply E-Grip III to the substrate using a 1/16" square-notched trowel.
2. Fold over the first drop along the wall (half the width of the roll).
3. Spread the adhesive using the proper size square-notched trowel. Take care not to spread more E-Grip III than can be covered with flooring within 30 minutes. The open time of the adhesive is 30–40 minutes at 70°F and 50% relative humidity.

NOTE: Temperature and humidity affect the open time of the adhesive. Temperatures above 70°F and/or relative humidity above 50% will cause the adhesive to set up more quickly. Temperatures below 70°F and/or relative humidity below 50% will cause the adhesive to set up more slowly. The installer should monitor the on-site conditions and adjust the open time accordingly.

4. Lay the flooring into the wet adhesive. Do not allow the material to “flop” into place; this may cause air entrapment and bubbles beneath the flooring.
5. Immediately roll the floor with a 75–100 lb. roller to ensure proper adhesive transfer. Overlap each pass of the roller by 50% of the previous pass to ensure the floor is properly rolled. Roll the width first and then the length. Roll again within the first 60 minutes.
6. Fold over the second half of the first roll and half of the second roll. Spread the adhesive. Spread the adhesive at right angles to the seam to ensure 100% coverage across the seam. Roll the flooring.
7. Continue the process for each consecutive drop. Work at a pace so that you are always folding material back into wet adhesive.
8. Do not allow E-Grip III to cure on your hands or come in contact with the finished flooring. Immediately wipe off excess adhesive with a rag dampened with mineral spirits! Cured adhesive is very difficult to remove from hands. We strongly suggest wearing gloves while using E-Grip III!
9. In some instances, it may be necessary to weigh down the seam until the adhesive develops a firm set. Keep traffic off the floor for a minimum of 24 hours. After installation, floor should be free from rolling loads for a minimum of 72 hours. Foot traffic and rolling loads can cause permanent indentations or bond failure in the uncured adhesive.
10. Where a transitional molding is required, Centaur offers a straight transition option. Molding size is 48" x 4" x 3/4" and may be secured using adhesive or a high quality double-face tape.

INTERLOCKING TILE

I. JOBSITE CONDITIONS


- A. Inspect all tiles for visual defects before beginning installation. No labor claim will be honored on material installed with visual defects. Any discrepancies must be reported immediately to Centaur before beginning installation.**
- B. Care should be taken when moving large or heavy equipment over Interlocking Tiles due to the modular free-floating design of the system. Plywood or other rigid sheeting can be utilized to better disperse the load to avoid tile buckle.
- C. This product is intended for indoor use only. Approved temperature range of 55-75 degrees F.
- D. This product is not designed to be used under rolling loads or in exterior applications due to the loose lay design.

- E. Radiant Heat - Interval Turf Interlocking Tiles are not suitable for installation over radiant heat.
- F. Areas to receive flooring should be weather tight and maintained at a minimum uniform temperature of 65°F (18°C) for 48 hours before, during, and after the installation.
- G. Install Interlocking Tiles over wood or concrete subfloors or firmly adhered resilient flooring, such as vinyl, linoleum, laminate, ceramic tile, and wood.
- H. Surface should be smooth to prevent irregularities, roughness, or other defects from transferring through to the new flooring.

II. INTERLOCKING TILE STORAGE AND HANDLING

- A. Store the material inside in its original, unopened packaging with all labels intact.
- B. Inspect all materials for visual defects before beginning the installation. Verify the material delivered is the correct style, color, and amount. Any discrepancies must be reported to the retailer where the material was purchased.
- C. Remove tiles from cartons and allow them to sit in the area to be installed, at uniform room temperature 24 hours prior to installation.

III. INTERLOCKING TILE INSTALLATION – Use cross-connected configuration shown below

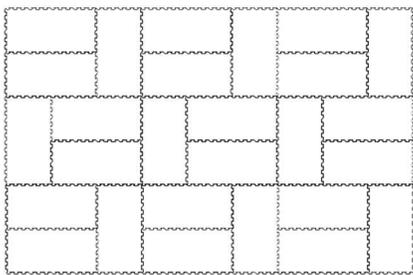

A. Area Mat Configuration and Transitions

- 1. For a simple area mat installation, lay out tiles to desired length and width and interlock tabs.
- 2. For a finished look, trim perimeter interlocking tabs with utility knife and metal straight edge.
- 3. Where a transitional molding is required, Centaur offers both interlocking and straight transition options. Secure the toe of the interlocking transition with a double-faced tape to prevent tripping hazards.

B. Wall-To-Wall Configuration

- 1. Sweep area clear of all dust and loose debris.
- 2. Determine a starting point for the first course of tile to best suit the site area. Because most walls are not straight or corners square, tile installation generally starts in the middle of the room, so measure the width and length of the space, divide room into four equal quadrants and snap chalk lines that are perpendicular (90 degrees) to each other.
- 3. Place the first tile's edges where the two perpendicular chalk lines meet.
- 4. Use cross-connected configuration shown above to install room.
Hint: Adjust the starting point to balance the tiles side-to-side to not end up with small cuts of tile against the walls.
- 5. Cut last piece to fit against the wall using a metal straight edge and a sharp utility knife. Do not compression fit the tile against the wall. Allow 1/4" at perimeter for expansion.

Cleaning & Maintenance

The following procedures are key in helping to preserve your Turf.

| | |
|------|-------------------------------------|
| I. | Keep it clean |
| II. | Brush periodically |
| III. | Do not abuse |
| IV. | Report any problems promptly |

I. Keep it clean

1. Dust, pollen, and airborne pollutants
For lightly soiled areas, use a rectangular microfiber mop with three (3) ounces of E-Cleaner per gallon of water. For heavily soiled areas, repeat procedure using a three (3) percent solution of household ammonia in warm water followed by a thorough rinsing with warm water. A wet vacuum can be used to remove excess water from surface.
2. Stains and other blemishes
The first rule is promptness. It is always easier to clean up a fresh spill than one that has dried and hardened. Remove any solid or paste-like deposit with a spatula or table knife. Blot up excess liquids with paper towels, a clean cloth, or a dry absorbent, such as kitty litter or fuller's earth. Dry absorbents can then be vacuumed up afterwards.

Synthetic fibers have high resistance to staining. However, it is important to realize they are only one part of a sophisticated system of various components designed for overall performance. Some cleaning agents safe for the face fibers can harm other components of the Turf. Therefore, cleaning agents are grouped into two sets:

The first can be used liberally directly on the turf surface, and the second should only be applied by rubbing a cloth that is lightly soaked in the cleaner, in order to minimize penetration of possible harmful agents below the turf surface.

In the **first group** of cleaners which can generally be applied without special precautions are:

- A warm, mild solution of granular household detergent or any low sudsing detergent for fine fabrics. Use approximately one teaspoon to one pint of water. This will handle most waterborne stains including:

| | | | |
|--------------|------------------|-----------|-------------|
| Coffee | Cola | Tea | Blood |
| Ketchup | Milk | Ice Cream | Urine |
| Mustard | Cocoa | Butter | Dye |
| Fruit juices | Vegetable juices | Glue | Latex paint |

- A three (3) percent solution of ammonia in water may be used in lieu of household detergent for more stubborn stains.
- Do not use cleaners that contain chlorine bleaches or caustic cleaners (pH above 9) or highly acidic cleanses (pH below 5). Use only neutral cleaners such as E-Cleaner.
- Rinse area thoroughly with clean warm water to remove any traces of soap or ammonia
- Blot up excessive liquid.

The **second group** of cleaners, where agent must be applied sparingly, and care taken to avoid penetration beneath the Turf are:

- Mineral spirits or a grease spot remover like perchlorethylene (dry cleaning solution) of the type sold by most variety stores and supermarkets. In general, cleansers in this category should handle most oil-based stains including:

| | | | |
|-------------|----------------------|---------------|-------------|
| Asphalt | Motor oil and grease | Chewing gum | Lipstick |
| Tar | Suntan oil | Crayon | Nail polish |
| Shoe Polish | Cooking oil | Ballpoint ink | Floor wax |

Caution: mineral spirits and other petroleum-based solvents are flammable. Do not smoke or permit open flames near where these are being used. Be sure the area is well ventilated where solvent cleaners are used and remember to use sparingly.

3. Animal waste - Neutralize with mixture of white distilled vinegar in an equal amount of water. Flush thoroughly with water after application. And vacuum up excess solution with a wet vacuum.
4. Chewing gum - In addition to dry cleaning fluid, chewing gum can be removed by freezing. Aerosol packs of refrigerant are available from most carpet cleaning suppliers for this purpose, or dry ice can be used. After freezing, scrape with a knife.
5. Fungus or mold spots - A one (1) percent solution of hydrogen peroxide in water can be sponged on to the affected area. Flush thoroughly with clean water after application.

II. Periodic brushing

1. Matting of fibers may occur in areas of high foot traffic, especially if fibers have become soiled with dirt and other airborne pollutants.
2. Periodic “cross brushing” of the Turf can help restore the aesthetic appearance of the Turf. “Cross brushing” means all brushing activity takes place against the grain, nap, or sweep of the Turf fibers. By brushing against the Turf, the fibers are “fluffed up”. A brush with synthetic bristles should be used. Never use a brush with metal or wire bristles as these will change the Turf fibers.

III. Do not abuse

- Lighted cigarettes can’t ignite, but can damage, by fusing the tips of the fibers together.
- Furniture and equipment with sharp or jagged edges may puncture or tear the Turf.
- Sprinkler systems or hard water can leave mineral deposits that may cause discoloration.
- Exposing Turf to reflected sunlight through windows may fuse the Turf fibers together.

Warranty

All Centaur rubber-backed Interval Turf flooring is guaranteed to be free from manufacturing defects on both material and workmanship. If such a defect is discovered, the customer must notify Centaur either through the contracting installer, distributor, or directly. If found to be defective under normal non-abusive conditions, at the discretion of Centaur, the sole remedy against the seller will be to repair, to replace, or to issue a credit not exceeding the selling price of the defective goods. These warranties only apply to the original purchaser.

Please see the Centaur Warranty Guide for length specifics.

Interval Turf warranty shall not cover dissatisfaction due to improper installation, normal wear, damage from improper maintenance or usage, or general misuse, including and without limitation: burns, cuts, tears, scratches, scuffs, damage from rolling loads, damage from cleaning products not recommended by Centaur, slight shade variations or shade variations due to exposure to direct sunlight, or differences in color between samples or photographs and actual flooring.

I. Items Under Warranty:

1. WEAR – Centaur warrants that Interval Turf products will not wear more than 10% of its surface pile weight from abrasive wear during the warranty period. By abrasive wear is meant fiber loss from the wear layer through normal abrasion, not crushing or flattening of the fiber surface pile in any area, nor due to abnormal usage of the fiber surface.
2. EDGE RAVEL – Centaur warrants that Interval Turf products will not edge ravel along seams during the warranty period.
3. DELAMINATION – Centaur warrants that Interval Turf products will not delaminate during the warranty period of the fiber surface when maintained according to our published procedures. Delamination warranty excludes roll edges that have been modified by cutting and exposed in open areas where not properly protected by an edge molding.

II. Limitations – This warranty does not include:

1. Disfigurement or damage caused by abnormal use or any damage to the Interval Turf not arising out of a defect to our product. For example, the warranty does not cover tears, burns, cuts, installation on stairs or damage in transit.
2. Differential fading due to light exposure, shading, pile crush, dye lot differences and soiling.
3. Any condition that would have had a visible defect upon inspection prior to installation.
4. Damage to Interval Turf from any use for which the product was not designed.
5. The exact matching of shade or color.
6. Any express or implied promise made by any salesman or representative.
7. Tears, burns, cuts or damage due to improper installation, improper use or improper cleaning agents or maintenance methods.
8. Labor costs for installation of original or replacement material.
9. Sale of “Remnants”, “Seconds”, “Off Goods” or other irregular (non-first quality) flooring materials. With respect to “Seconds”, “Off Goods”, or “Remnants” such are sold “as is,” and Centaur makes no warranties whatsoever, express or implied with respect thereto, including warranties of merchantability or fitness for a particular purpose.
10. Problems caused by moisture, hydrostatic pressure, or alkali in the sub-floor.
11. Problems caused by uses, maintenance, and installation that are contrary to Centaur specifications, recommendations or instructions.
12. Material installed outdoors.
13. Material installed with obvious defects.
14. Material that is not installed and maintained as recommended by Centaur.

15. Damage to flooring products from pallet jack and tow-motor or vehicular traffic.
16. Environments where the product will be exposed to animal fats, vegetable oils, grease or petroleum-based materials (i.e.: commercial kitchens or auto repair facilities).
17. Premature wear and deterioration from spikes or natural grass cleats.
18. Differences in color between products and photography.

These warranties are in lieu of any other warranty expressed or implied. Centaur shall not be liable for any incidental or consequential damages which may result from a defect. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. These warranties give you specific rights, and you may also have rights which may vary from state to state. To know what your legal rights are in your state, consult your local or state Consumer Affairs Office or your State Attorney General. For complete and latest warranty information, please visit www.centaurfloors.com .



800-536-9007 www.centaurfloors.com

Manufactured in the U.S.A. by:



© 2022 All designs and colors are copyrighted by Ecore