


Centaur

Floor Systems



Installation Instructions:

Directional Arrows on back of tile should resemble this diagram

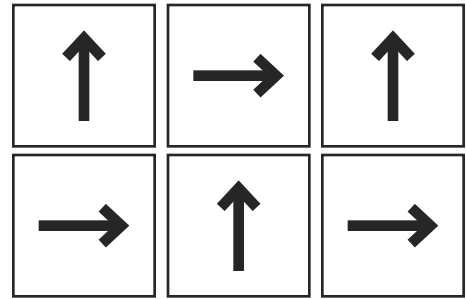

Tool Requirements:

Tape Measure
Straight edge
Chalk line

Utility knife
Release-Bond Adhesive, or approved equal
150 lb three section roller

Guidelines:

1. Tiles should be removed from shipping cartons and climatized in installation area whenever possible. Room, floor covering and adhesive must be at a temperature of 65° F degrees for 48 hours prior to and after installation.
2. Floor must be sound, and should be stripped of all waxes and floor finishes, and should be clean, dry and free of debris prior to installation. Use a quality latex/portland cement based type-patching compound to fill or level any irregular areas in the sub-floor. Never sand resilient floors; they may contain asbestos.
3. **Important!** Tiles should always be quarter-turned, install by turning each tile 90-degrees in an alternating pattern.

When done properly directional arrows printed on the back of each tile should point in two directions only.

Installation Instructions:

1. Determine centerline in both north -south, and east -west directions of area to be covered in modular tiles. Snap chalk lines on centerline in both directions forming a cross.
2. Spread adhesive with a 1/8" x1/8" x 1/16" V-notched trowel. Mats, Inc. Release-Bond Adhesive coverage will be approximately 450-675 sq./ft. per gallon. Allow adhesive to flash for 15 minutes prior to installation. Apply only as much adhesive that can be installed within 30 minutes.
3. Begin in center and install first tile aligning corner with the cross of the chalk centerline. Press modular tiles firmly into adhesive. Continue installing tiles in a parquet pattern by quarter turning each tile. Work from the center to the outside edges of area.
4. Roll installed tiles in both directions with a 150 lb three section roller.
5. Inspect area to insure there are no gaps and all tiles are flat and securely in place.