

Centaur Floor Systems



Speckled S Rolls & Tiles

INSTALLATION AND MAINTENANCE MANUAL

Manufactured in the U.S.A. by Ecore

Revised on 01/13/2020
Supersedes all previous versions.
Check website for updates.

www.centaurfloors.com

Installation

Job Site Conditions	3
Subfloors and Subfloor Preparation	3
Storage & Handling	4
Roll Installation	5

Maintenance

Introduction	8
Cleaning Chart	9
Cleaning Procedures	9

Warranty

Warranty	10
----------	----

I. JOB SITE CONDITIONS

1. Installation should not begin until after all other trades are finished in the area. If the job requires other trades to work in the area after the installation of the floor, the floor should be protected with an appropriate cover. Kraft paper or plastic works well.
2. Areas to receive flooring should be weather tight and maintained at a minimum uniform temperature of 65°F (18°C) for 48 hours before, during, and after the installation.

II. SUBFLOORS

Centaur's rolls and tiles, may be installed over concrete, approved Portland- based patching and leveling materials, and wood.

NOTE: Gypsum-based patching and leveling compounds are not acceptable.

1. Wood Subfloors – Wood subfloors should be double construction with a minimum thickness of one inch. The floor must be rigid and free from movement with a minimum of 18 inches of well-ventilated air space below.
2. Underlayments – The preferred underlayment panel is American Plywood Association (APA) underlayment grade plywood, minimum thickness of 1/4-inch, with a fully sanded face.

NOTE: Particleboard, chipboard, Masonite and lauan are not considered to be suitable underlayments.

3. Concrete Floors – Concrete shall have a minimum compressive strength of 3000 psi. New concrete slabs should cure for a minimum of 28 days. It must be fully cured and permanently dried.

III. SUBFLOOR REQUIREMENTS AND PREPARATION

1. Subfloors shall be dry, clean, smooth, level, and structurally sound. They should be free of dust, solvent, paint, wax, oil, grease, asphalt, sealers, curing and hardening compounds, alkaline salts, old adhesive residue, and other extraneous materials, according to ASTM F710.
2. Subfloors should be smooth to prevent irregularities, roughness, or other defects from telegraphing through the new flooring. The surface should be flat to the equivalent of 3/16" (4.8 mm) in 10' (3.0 m).
3. Mechanically remove all traces of old adhesives, paint, or other debris by scraping, sanding, or scarifying the substrate. Do not use solvents. All high spots shall be ground level and low spots filled with an approved Portland-based patching compound.
4. All saw cuts (control joints), cracks, indentations, and other non-moving joints in the concrete must be filled with an approved Portland-based patching compound.
5. Expansion joints in the concrete are designed to allow for expansion and contraction of the concrete. If a floor covering is installed over an expansion joint, it will likely fail in that area. Use expansion joint covers designed for resilient flooring.
6. Always allow patching materials to dry thoroughly and install according to the manufacturer's instructions. Excessive moisture in patching material may cause bonding problems or a bubbling reaction with the E-Grip III adhesive.

HAZARDS:

SILICA WARNING – Concrete, floor patching compounds, toppings, and leveling compounds can contain free crystalline silica. Cutting, sawing, grinding, or drilling can produce respirable crystalline silica (particles 1-10 micrometers). Classified by OSHA as an IA carcinogen, respirable silica is known to cause silicosis and other respiratory diseases. Avoid actions that may cause dust to become airborne. Use local or general ventilation or provide protective equipment to reduce exposure to below the applicable exposure limits.

ASBESTOS WARNING – Resilient flooring, backing, lining felt, paint, or asphaltic “cutback” adhesives can contain asbestos fibers. Avoid actions that cause dust to become airborne. Do not sand, dry sweep, dry scrape, drill, saw, bead blast, or mechanically chip or pulverize. Regulations may require that the material be tested to determine the asbestos content. Consult the document “Recommended Work Practices for Removal of Existing Resilient Floor Coverings” available from the Resilient Floor Covering Institute.


LEAD WARNING – Certain paints can contain lead. Exposure to excessive amounts of lead dust presents a health hazard. Refer to applicable federal, state, and local laws and the publication “Lead Based Paint: Guidelines for Hazard Identification and Abatement in Public and Indian Housing” available from the United States Department of Housing and Urban Development.

7. Moisture must be measured using the RH Relative Humidity test method per ASTM F2170 standard. Moisture content should not exceed 85% RH. If the emissions exceed the limitations, the installation should not proceed until the situation has been corrected.
8. In the event that a moisture mitigation system is required, it must conform to the ASTM F3010 Standard Practice for Two-Component Resin Based Membrane Forming Moisture Mitigation Systems for use Under Resilient Floor Coverings.
9. It is essential that pH tests be taken on all concrete floors. If the pH is greater than 9, it must be neutralized prior to beginning the installation.
10. Adhesive bond tests should be conducted in several locations throughout the area. Glue down 3’ x 3’ test pieces of the flooring with the recommended adhesive and trowel. Allow to set for 72 hours before attempting to remove. A sufficient amount of force should be required to remove the flooring and, when removed, there should be adhesive residue on the subfloor and on the back of the test pieces.

IV. MATERIAL STORAGE AND HANDLING

1. Material should be delivered to the job site in its original, unopened packaging with all labels intact.
2. Roll material should always be stored laying down. Storing rubber on end will curl the edges resulting in permanent memory of the material. All edges with memory curl must be straight edge cut before installation. Do not store rolls higher than 4 rolls or for more than six months. Material should only be stored on a clean, dry, smooth surface.
3. **NOTE: Centaur’s Rolls and Tiles are manufactured from recycled materials and slight variance in shade and color chip dispersion is normal. It is the installer’s responsibility to inspect all products to insure the correct style, thickness, and color. Any moderate to severe discrepancies should be reported immediately before beginning the installation. No labor claim will be honored on material installed with visual defects.**

4. The material and adhesive must be acclimated at room temperature for a minimum of 48 hours before starting installation.
5. Roll material is stretched slightly during the manufacturing process. At the job site, the installer should unroll all rolls and allow to relax overnight. A bare minimum of two hours is required. Shaking the material once it is unrolled can help it to relax.
6. Rolls are labeled with batch numbers and roll numbers. Do not mix batch numbers together and install all rolls in consecutive order
7. Custom roll lengths eliminate the possibility of the rolls being manufactured and numbered in the customer's desired installation sequence, and Centaur cannot be responsible for any resulting shading issues.
8. Install all rolls in the same direction; note the **"This Side Down"** stamp at the beginning of the roll.

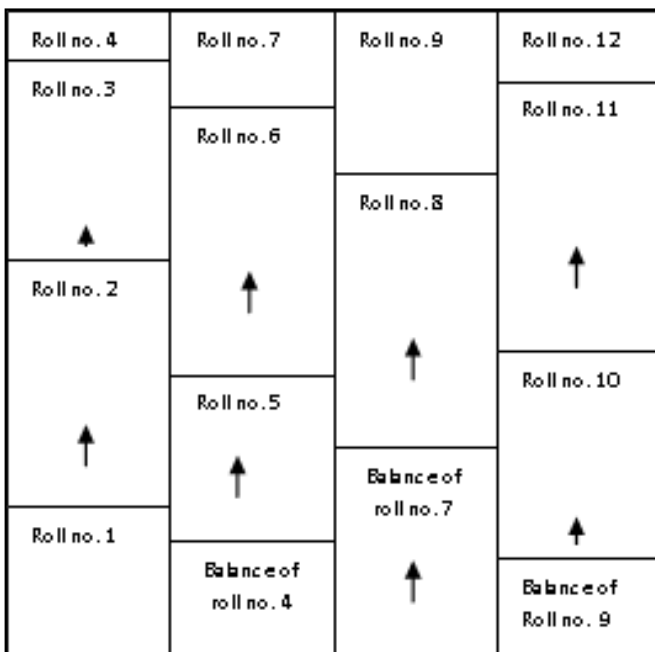

V. INSTALLATION – ROLL MATERIAL

1. Make the assumption that the walls you are butting against are not straight or square. Using a chalk line, make a starting point for an edge of the flooring to follow. The chalk line should be set where the first seam will be located.
2. Remove the roll from the shrink wrap and unroll it onto the floor. Lay the rubber on the floor in a way that will use your cuts efficiently. Cut all rolls at the required length, including enough to run up the wall a few inches. End seams should be staggered and overlapped approximately 3-6".
3. **Allow the rough cuts to relax in position for two hours.**
4. Trim end seams **after acclimation** using a square for a tight fit without gaps.
5. After proper acclimation and rough cuts are made and allowed to relax, you may begin the installation.
6. Align the first edge to the chalk line.

Note: it is very important that the first seam is perfectly straight.

7. Position the second roll with no more than a 1/8" overlap over the first roll at the seam. After adhesive is applied to substrate the material will be worked back to eliminate the overlap. This procedure will leave tight seams and eliminate any gaps.
8. Care should be taken to not over compress the seam. Over compressed seams will cause peaking.

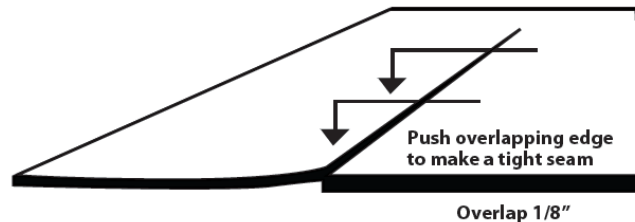


Diagram 2

9. It may be necessary to trim the edge of the second lineal drop if the rolls do not extend the length or width of the room. Rolls laid end to end with a variance in roll width greater than 1/4" could result in peaked seams.
10. Repeat for each consecutive sheet necessary to complete the area or those rolls that will be installed that day.

NOTE: This product is suitable for installation over a radiant heat source.

METHOD 1 – GLUE DOWN

- a. After performing the above procedures, begin the application of E-Grip III, a one-component moisture-cured polyurethane adhesive. E-Grip III should not be mixed; use right out of the pail. Apply E-Grip III to the substrate using a 1/16" square-notched trowel.
- b. Fold over the first drop along the wall (half the width of the roll).
- c. Spread the adhesive using the proper size square-notched trowel. Take care not to spread more E-Grip III than can be covered with flooring within 30 minutes. The open time of the adhesive is 30–40 minutes at 70°F and 50% relative humidity.

Note: The open time of adhesive is affected by temperature and humidity. High temperatures and high humidity will cause the adhesive to set quickly. Low temperatures and low humidity will cause adhesive to cure at a slower rate. The installer should monitor on-site conditions and adjust open time accordingly.

- d. Lay the flooring into the wet adhesive. Do not allow the material to "flop" into place; this may cause air entrapment and bubbles beneath the flooring.
- e. Immediately roll the floor with a 75–100 lb. roller to ensure proper adhesive transfer. Overlap each pass of the roller by 50% of the previous pass to ensure the floor is properly rolled. Roll the width first and then the length.
- f. Fold over the second half of the first roll and half of the second roll. Spread the adhesive. Spread the adhesive at right angles to the seam to prevent the adhesive from oozing up through the seam. Roll the flooring.

- g. In some instances it may be necessary to weigh down the seam until the adhesive develops a firm set. Boxes of cove base or tile work well.
- h. Continue the process for each consecutive drop. Work at a pace so that you are always folding material back into wet adhesive.

NOTE: Never leave adhesive ridges or puddles. They will telegraph through the material.

- i. Do not allow E-Grip III to cure on your hands or the flooring. Cured adhesive is very difficult to remove. We strongly suggest wearing gloves while using E-Grip III.
- j. Immediately wipe excess adhesive off floor with a rag slightly dampened with mineral spirits. Follow the mineral spirits with a rag dampened with water to remove the mineral spirits.

NOTE: Use mineral spirits sparingly. Saturating the rubber with mineral spirits may darken the flooring and cause the adhesive to be pushed too deeply into the pores of the rubber.

- k. If some seams are gapping it is possible to hold them together temporarily with blue painters tape. **Tape MUST be removed after adhesive has developed a firm set which is approximately 2-3 hours. Allowing tape to remain longer than 2-3 hours or using aggressive tapes may result in adhesive residue.** Centaur will not be responsible for residue left behind from tape of any kind.
- l. In some instances, it may be necessary to weigh down the seam until the adhesive develops a firm set. Boxes of cove base or tile work well. Keep traffic off the floor for a minimum of 24 hours. Floor should be free from rolling loads for a minimum of 72 hours. Foot traffic and rolling loads can cause permanent indentations or debonding in the uncured adhesive.

METHOD 2 – TAPE DOWN

NOTE: It is characteristic for rubber flooring to expand and contract with changes in temperature and humidity. **Dependent upon conditions, double face tape may not be strong enough to hold rubber in place in every situation and when used, neither the flooring nor the installation method can be warranted.** For permanent installations it is recommended to use our E-Grip III urethane adhesive.

NOTE: Tape method is not an approved procedure for ice rink applications.

- a. Dry lay the rolls onto the subfloor.
- b. Draw a pencil line beneath all seams to be taped.
- c. Use a high-quality double-faced carpet tape with a minimum width of two inches.
- d. Fold over the first drop along the chalk line (half the width of the roll).
- e. Apply two strips of the double-faced tape along the seam, one on each side of the pencil mark.
- f. Remove the release paper and place the flooring onto the exposed tape.
- g. When butting one roll next to another, overlap the seams by no more than 1/8". Work the material back to eliminate the overlap. This procedure will leave tight seams over the tape and eliminate any gaps.
- h. Hand-roll the seams to ensure adequate contact. Do not roll the entire floor.

Floor protection, Cleaning and Maintenance

IMPORTANT INFORMATION FOR THE SPECIFIER:

Centaur recommends our environmentally friendly E-Cleaner and E-Strip maintenance products.

Proper protection and maintenance of Speckled S post-installation should be specified by the architect/designer. Speckled S should not be subject to construction debris and potential damage caused from construction activities. The specifier should determine and assign the specific type of cleaning and products based on the material being installed.

It is the Specifier's responsibility to:

Provide specification details to protect the floor post-installation and until job construction is complete, such as covering the entire floor with paper or other protective material.

Determine and assign the responsibility for the initial cleaning and finishing of Speckled S. This responsibility should be specifically assigned to the flooring contractor, general contractor, maintenance contractor, or owner. All Centaur published procedures shall be followed.

It is the General Contractor's responsibility to:

Provide a building or installation area that is fully enclosed from the elements. The roof, windows, and doors shall be finished.

Insure that the temperature shall be climate controlled with a minimum uniform temperature of 65° F for 48 hours prior to, during, and after the Speckled S installation.

Insure that any areas of the flooring that are subject to direct sunlight through doors or windows shall have the doors or windows covered for such time until the installation of the Speckled S material is complete.

Protect Speckled S from damage and construction debris by using an appropriate floor covering. All sections shall be fully covered until such time that the recommended initial cleaning may be performed.

Speckled S Rolls Cleaning Instructions

Steps	Green Products	Dilution	Diluted Coverage	Pads & Brushes
Initial Cleaning	E-Cleaner	10 oz./gal. water	2,000 sq. ft./gal.	Microfiber mop, Soft Nylon Brush or 3M 5100 Red Pad or equal
Daily Cleaning	E-Cleaner	2-4 oz./gal. water	6,000 sq. ft./gal.	Microfiber mop, Soft Nylon Brush or 3M 5100 Red Pad or equal
Heavy Soil and Restorative Maintenance Cleaning	E-Strip	16-32 oz./gal. water	500-1,000 sq. ft./ gal.	3M 7100 Brown or 7200 Black stripper pad or equal

VIII. CLEANING PROCEDURES

1. Initial Cleaning
 - a. Remove all surface soil, debris, sand, and grit by sweeping, dust mopping, or vacuuming with a high CFM vacuum. For large areas, use auto scrubbers to clean floors.
 - b. Scrub floor with E-Cleaner (10 oz./gal. of water), using buffer or auto scrubber with a soft nylon brush or approved pad. Avoid flooding the floor.
 - c. Pick up solution with a wet vacuum, rinse with clean water, picking up the rinse water with a wet vacuum and allow to dry thoroughly (6-8 hours).
2. Daily/Regular Cleaning
 - a. Sweep, dust mop, or vacuum floor to remove surface soil, debris, sand, and grit.
 - b. Damp mop with a microfiber mop or auto- scrub using an approved pad or nylon brush with E-Cleaner (2-4 oz./gal. of water).
3. Restorative Maintenance
 - a. Sweep and dry vacuum floor thoroughly.
 - b. Heavy scrub floor with E-Strip. This cleaning may be performed with an auto scrubber or rotary scrubber.
 - c. Vacuum soiled solution with a wet/dry vacuum.
 - d. Rinse with clean water.
 - e. Pick up solution with wet vacuum.
 - f. Allow floor to thoroughly dry.
4. Heavy Soil
 - a. Remove as much surface soil, debris, sand, and grit as possible by sweeping, dust mopping, or vacuuming.
 - b. Scrub floor with E-Cleaner or E-Strip, using a buffer or auto scrubber with an approved pad.
 - c. Pick up solution with a wet vacuum, rinse with clean water and allow to dry thoroughly (6-8 hours).

Warranty

All Centaur rubber flooring is guaranteed to be free from manufacturing defects on both material and workmanship. If such a defect is discovered, the customer must notify Centaur either through the contracting installer, distributor, or directly. If found to be defective within three years under normal non-abusive conditions, the sole remedy against the seller will be the replacement or repair of the defective goods, or at the seller's option, credit may be issued not exceeding the selling price of the defective goods.

Centaur roll warranty shall not cover dissatisfaction due to improper installation, normal wear or quality of installation expected from the use or environment of installation, damage from improper maintenance or usage, or general misuse, including and without limitation: burns, cuts, tears, scratches, scuffs, damage from rolling loads, damage from cleaning products not recommended by Centaur, slight shade variations or shade variations due to exposure to direct sunlight, or differences in color between samples or photographs and actual flooring.

Excluded from Warranty - These warranties do not apply to the following:

1. The exact matching of shade, color or mottling.
2. Any express or implied promise made by any salesman or representative.
3. Tears, burns, cuts or damage due to improper installation, improper use or improper cleaning agents or maintenance methods.
4. Wear from chairs or other furniture without proper floor protectors will void the warranty. Care should be taken to protect the flooring from damage by using good quality protective feet for chairs, tables, and other furniture. Chair mats may be required under chairs with casters/wheels.
5. Labor costs for installation of original or replacement material.
6. Sale of "Remnants", "Seconds", "Off Goods" or other irregular (non-first-quality) flooring materials. With respect to "Seconds", "Off Goods", or "Remnants" such are sold "as is," and Centaur makes no warranties whatsoever, express or implied with respect thereto, including warranties of merchantability or fitness for a particular purpose.
7. Problems caused by moisture, hydrostatic pressure, or alkali in the sub-floor.
8. Problems caused by uses, maintenance, and installation that are contrary to Centaur specifications, recommendations or instructions.
9. Material installed with obvious defects.
10. Damage to flooring products from high heels or spike heels.
11. Damage or discoloration to flooring products from rubber mats, rubber backed mats, or car tires.
12. Installation of Centaur products with adhesives other than those recommended by Centaur.
13. Fading and/or discoloration resulting from heavy sunlight penetration and ultraviolet ray exposure from direct or glass-filtered sunlight.
14. Material that is not installed and maintained as recommended by Centaur.
15. Damage to flooring products from pallet jack and tow-motor traffic.
16. Environments where the product will be exposed to animal fats, vegetable oils, grease or petroleum based materials. (i.e.: commercial kitchens or auto repair facilities.)
17. Premature wear and deterioration from spikes and skate blade exposure.
18. Differences in color between products and photography.
19. Embossing / density deviations between product and samples, photography.

These warranties are in lieu of any other warranty expressed or implied. Centaur shall not be liable for any incidental or consequential damages which may result from a defect. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. These warranties give you specific rights, and you may also have rights which may vary from state to state. To know what your legal rights are in your state, consult your local or state Consumer Affairs Office or your State Attorney General.

For complete and latest warranty information for products within the Centaur Flooring collection, please visit www.centaurfloors.com.

Centaur
Floor Systems

800-536-9007 – www.centaurfloors.com

© 2020 All designs and colors are copyrighted by Ecore.