


Centaur

Floor Systems

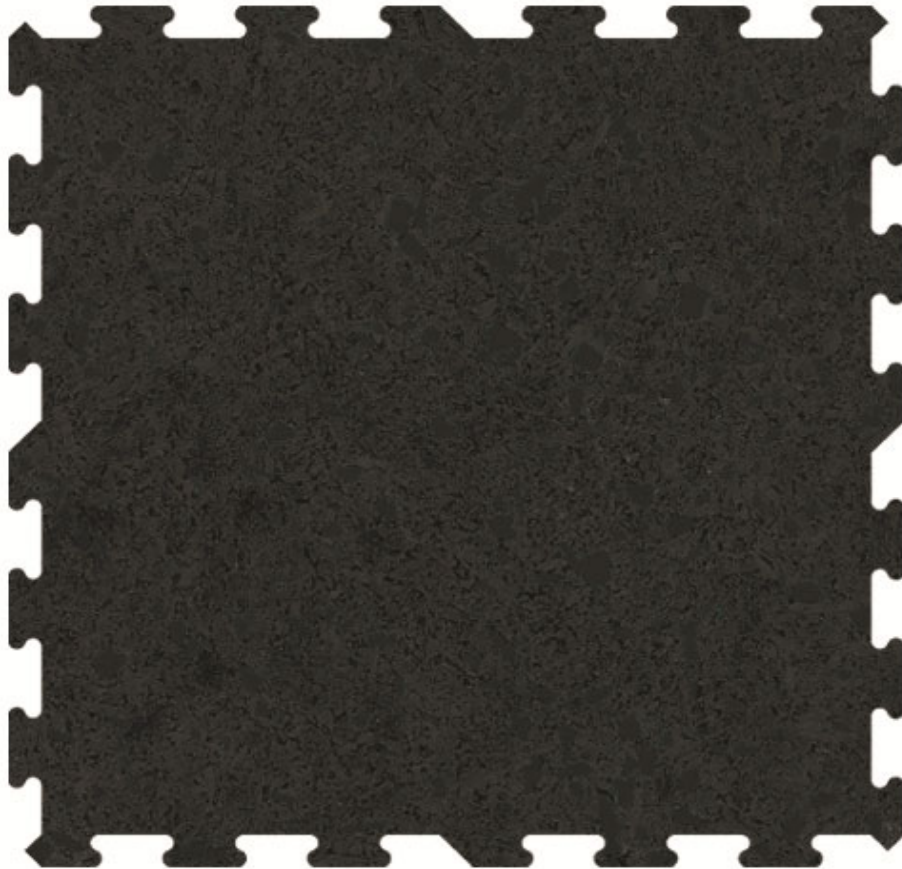

FASTRACK INTERLOCKING TILE

TECHNICAL MANUAL

Installation • Maintenance • Warranty

ecore™

Manufactured in the U.S.A. by: Ecore

Revised 07/31/2018
Supersedes all previous versions.
Check website for updates.

866.795.2732 – www.ecoreathletic.com

Table of Contents

INSTALLATION

Required Tools	3
Job Site Conditions	3
Subfloor Recommendations	3
Storage & Handling	4
Interlocking Tile Installation	4
Interlocking Area Mat Installation	5

MAINTENANCE

Floor Protection	5
Assignment of Cleaning & Maintenance	5
Cleaning Chart	6
Cleaning Procedures	6

WARRANTY

Warranty	7
----------	---

INSTALLATION

I. REQUIRED TOOLS AND MATERIALS

Tape measure	Framing square
Chalk line	Marking instrument, such as paint pens or chalk
Metal Straight Edge	Push broom or vacuum
Utility knife with heavy-duty blades	

II. JOB SITE CONDITIONS

- A. **Inspect all tiles for visual defects before beginning installation. No labor claim will be honored on material installed with visual defects. Any discrepancies must be reported immediately to Ecore's Technical Services Department at 1-866-795-2732 before beginning installation.**
- B. Care should be taken when moving large or heavy equipment over Interlocking Tiles due to the modular free floating design of the system. Plywood or other rigid sheeting can be utilized to better disperse the load to avoid tile buckle.
- C. 8mm Interlocking Tiles are the minimum approved thickness in free weight areas and extra matting is suggested in these areas to reduce tile damage from repeated high impact.
- D. This product is intended for indoor use only. Approved temperature range of 55-75 degrees F.
- E. Do not use where the flooring will be exposed to fuels, oils, solvents, chemicals, or large fluctuations in temperature.
- F. This product is not designed to be used under rolling loads or in commercial applications due to the loose lay design. If full adhesion is required please contact Ecore for other recommended products.
- G. Areas to receive flooring should be weather tight and maintained at a minimum uniform temperature of 65°F (18°C) for 48 hours before, during, and after the installation.
- H. Install Interlocking Tiles over wood or concrete subfloors, or firmly adhered resilient flooring such as vinyl, linoleum, laminate, ceramic tile, and wood.
- I. Surface should be smooth to prevent irregularities, roughness, or other defects from transferring through to the new flooring.

III. MATERIAL STORAGE AND HANDLING


- A. Store the material in its original, unopened packaging with all labels intact.
- B. Inspect all materials for visual defects before beginning the installation. Verify the material delivered is the correct style, color, and amount. Any discrepancies must be reported to the retailer where the material was purchased.
- C. Remove tiles from cartons and allow to sit in the area to be installed, at uniform room temperature 24 hours prior to installation.
- D. Mix tiles from several boxes or skids. Ensure that job site and subfloor conditions are met.
- E. Install Interlocking Tiles so that the directional markings stamped on the bottom of the tiles point in the same direction. It is mandatory to install these tiles in the same direction

INSTALLATION

Wall To Wall Interlocking Tile Installation

IV. LAYOUT Wall To Wall

- A. It is customary to begin tile installations from the center of the room.
- B. Measure the width of the area to be covered.
- C. Mark the center of the area at two points, one at each end.
- D. Snap a chalk line, line #1, through these two points.
- E. Determine the center point of the chalk line.
- F. Using a Carpenter's square or another method, snap a second chalk line, line #2, perpendicular (at 90°) to the first line. The lines should intersect at their centers.
- G. The area to be covered is now divided into quarters. Begin the installation at the center of the area, where the two lines intersect. See Diagram 1. Interlocking Tiles must be installed in the same direction. Directional markings stamped on the bottom of the tiles must point in the same direction.
- H. Lay whole tiles from left to right along chalk line #1 up to the wall on the opposite side of chalk line #2. The last tile will likely have to be cut to fit against the wall.
- I. Cut the last piece to fit against the wall using a metal straight edge and a sharp utility knife. Do not compression fit the tile against the wall. Allow a 1/4" around the perimeter for expansion.

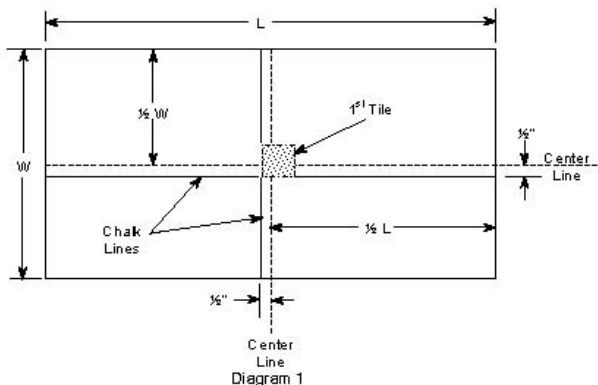

Area Mat Interlocking Tile Installation

V. Area Mat

- A. For a simple area mat installation, lay down the tiles to the desired length and width and interlock the tabs.
- B. For a finished look, trim the interlocking tabs from the mat using a sharp utility knife and a metal straight edge.

MAINTENANCE

IMPORTANT INFORMATION FOR THE INSTALLER

Centaur recommends Ecore's environmentally friendly cleaners for our flooring products

FLOOR PROTECTION, CLEANING AND MAINTENANCE

It is the responsibility of the specifier to provide the following:

Specification details to protect the floor post-installation and until job construction is complete, such as covering the entire floor with paper or other floor covering. This includes plastic, plywood, or masonite until construction is complete.

The specifier should determine and assign the responsibility for the initial cleaning of the Everlast products. This responsibility should be specifically assigned to the flooring contractor, general contractor, maintenance contractor, or owner. All Everlast published procedures shall be followed.

It is the General Contractor's responsibility to provide the following:

A building or installation area that is fully enclosed from the elements. The roof, windows, and doors shall be finished.

Temperature shall be climate controlled with a minimum uniform temperature of 65° F for 48 hours prior to, during, and after the Everlast flooring installation, so the flooring contractor can acclimate the flooring materials.

Areas of the flooring that are subject to direct sunlight through doors or windows shall have the doors or windows covered for such time until the installation of the Everlast material is complete.

Protect Everlast products from damage and construction debris by using an appropriate floor covering. All sections shall be fully covered until such time that the recommended initial cleaning may be performed.

MAINTENANCE

Steps	Cleaning Product	Mixture	Equipment
Initial Cleaning	Ecore's E-Cleaner	10 oz./gal. water	Soft nylon brush or Red scrubbing pad
Daily Cleaning	Ecore's E-Cleaner	2-4 oz./gal. water	Soft nylon brush, or Red scrubbing pad
Heavy Soil & Restorative Cleaning	Ecore's E-Cleaner or E-Strip	16 oz./gal. water	Brown or Black Stripper pad

A. Initial Cleaning

1. Remove all surface soil, debris, sand, and grit by sweeping, or vacuuming.
2. Scrub floor with Ecore's recommended E-Cleaner with a rectangular microfiber mop. A soft nylon brush may be used in more heavily soiled areas.
3. DO NOT flood the floor with water as the Interlocking design will allow water to pass through.

B. Daily/Regular Cleaning

1. Sweep, dust mop, or vacuum floor to remove surface soil, debris, sand, and grit.
2. Damp mop with a microfiber mop using Ecore's approved E-Cleaner.

C. Restorative Maintenance

1. Sweep or vacuum to remove loose soil.
2. Heavy scrub using a rotary scrubber or automatic scrubber with Brown or Black Stripper pad and stripper solution of Ecore's E-Strip.
3. Pick up solution with wet vac.
4. Rinse with clean water. **Do not flood the floor**
5. Allow floor to thoroughly dry.
6. Apply floor finish following initial finish application instructions.

D. Heavy Soil

1. Hard-to-clean and greasy areas may require a higher concentration of Ecore's E-Cleaner and may require a restorative maintenance.

WARRANTY

All Centaur rubber flooring is guaranteed to be free from manufacturing defects on both material and workmanship. If such a defect is discovered, the customer must notify Centaur either through the contracting installer, distributor, or directly. If found to be defective within three years under normal non-abusive conditions, the sole remedy against the seller will be the replacement or repair of the defective goods, or at the seller's option, credit may be issued not exceeding the selling price of the defective goods.

Fastrack warranty shall not cover dissatisfaction due to improper installation, damage from improper maintenance or usage, or general misuse, including and without limitation: burns, cuts, tears, scratches, scuffs, damage from rolling loads, damage from cleaning products not recommended by Centaur, slight shade variations or shade variations due to exposure to direct sunlight, or differences in color between samples or photographs and actual flooring.

Excluded from Warranty

These warranties do not apply to the following:

1. The exact matching of shade, color or mottling.
2. Any express or implied promise made by any salesman or representative.
3. Tears, burns, cuts or damage due to improper installation, improper use or improper cleaning agents or maintenance methods.
4. Wear from chairs or other furniture without proper floor protectors will void the warranty. Care should be taken to protect the flooring from damage by using good quality protective feet for chairs, tables, and other furniture. Chair mats may be required under chairs with casters/wheels.
5. Labor costs for installation of original or replacement material.
6. Sale of "Remnants", "Seconds", "Off Goods" or other irregular (non-first-quality) flooring materials. With respect to "Seconds", "Off Goods", or "Remnants" such are sold "as is," and Centaur makes no warranties whatsoever, express or implied with respect thereto, including warranties of merchantability or fitness for a particular purpose.
7. Problems caused by moisture, hydrostatic pressure, or alkali in the sub-floor.
8. Problems caused by uses, maintenance, and installation that are contrary to Centaur specifications, recommendations or instructions.
9. Material installed with obvious defects.
10. Damage to flooring products from high heels or spike heels.
11. Damage to flooring products from rubber mats or rubber backed mats.
12. Installation of Centaur products with adhesives other than those recommended by Centaur.
13. Fading and/or discoloration resulting from heavy sunlight penetration and ultraviolet ray exposure from direct or glass-filtered sunlight.
14. Material that is not installed and maintained as recommended by Centaur.
15. Damage to flooring products from pallet jack and tow-motor traffic.
16. Environments where the product will be exposed to animal fats, vegetable oils, grease or petroleum based materials. (i.e., commercial kitchens our auto repair facilities.)
17. Premature wear and deterioration from spikes and skate blade exposure.
18. Differences in color between products and photography.
19. Embossing / density deviations between product and samples, photography.

These warranties are in lieu of any other warranty expressed or implied. Centaur shall not be liable for any incidental or consequential damages which may result from a defect. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. These warranties give you specific rights, and you may also have rights which may vary from state to state. To know what your legal rights are in your state, consult your local or state Consumer Affairs Office or your State Attorney General. For complete and latest warranty information for products within the Centaur Flooring collection, please visit www.centaurfloors.com

Centaur **Floor Systems**

800-536-9007 | www.centaurfloors.com

ecore™

Manufactured in the U.S.A. by Ecore
715 Fountain Ave – Lancaster, PA 17601

©2018 All designs and colors are copyrighted by Ecore.